

GM10

Smart Dimmer Kit









- Control your lights from anywhere
- Voice Control with Alexa or Google for hands free use
- 12-24V AC/DC input option to "zone" Landscape transformers with PWM Dimming
- 120V input option with Triac dimming
- Set Schedules and timers
- Vast feature set of smart control options









12-24V PWM Dimmer Kit



Black = + White= -Red = Load Red & White= Load

Model number
Quantity
Net Weight
Gross Weight
Ctn Size

Smart dimmer kit 100PCS 12.8kg/28.31bs 14.3kg/31.Slbs 72.0cm*47.0cm*13.5cm 2.8inch 1 .8 inch 0.5inch

Specifications

Item Number	Maximum Wattage	Input Line Voltage	Dimm	
GM10-12V-W	200W	12-24VAC/DC	PWM	
GM10-120T	200W	120VAC	Triac	

NETWORK CONNECT AND APP SETUP







APP SETUP

		R	egi	ste	er		
< R	egist	er					
Un	iited Sta	tes of A	merica +'				
Mc	bile Nu	mber/Er	nail				
		Agree <u>Us</u>	er Agreeme	nt and P	rivacy	Policy	
			•				
1	w	o r	Y Passw	ords			
ч	a s	d	fa	, u h	i	k	T P
Ŷ	z	x	c v	b	'n	m	Ø
				<u>م الم م</u>	-		

You may use an email or mobile number to create an account. Then tap **Get verification Code**. (A verification code will be sent to your email or mobile number.)





SMART DIMMER SETUP





ζ	Confirm Pairing
	Reset the device first. If the light is blinking fast, skip the reset step O Power on O Tum On-off-on-off-on (Subject to User Manual) O Ensure light is fast blinking Attention-Please complete pairing process within 3 minutes after device reset.
	Resetting Devices >
	Indicator light on Dimmer Switch must be blinking rapidly to connect. If not already blinking, press and hold the power button for five seconds, then tap Confirm.

Reset the device



SMART DIMMER SETUP

Cancel	Cancel
Enter Wi-Fi Password	
	Place your router, mobile phone, and
	device as close as possible
2/0	
✓ ×	
	4%
Wi-Fi 2.4GHz ↔	
A Password ©	
Confirm	Device found Register Device to Smart Cloud Initializing device

	Troubleshooting	
	Device not responding Try "Switch Pairing Mode"	
	 Check if the device has been reset and the indicator is blinking quickly. Check if it is 2.4 GHz Wi-Fi. Verify the Wi-Fi password. 	
	Retry	
	Switch Pairing Mode	
Devic ct pass Clo prev ag	If you see a re not responding notifica- neck to be sure your Wi- sword was entered corre- pose the app and repeat to ious steps to try connec- ain or device-pairing FA for further assistance.	ation, Fi ctly. he tting Qs

SMART DIMMER SETUP

6	
	Device Added
	Added.
	Device added successfully
	Living Room
	Done
	Once device is successfully added,
	tap the Pen icon to rename the device.

Edit Device Name
2 Added. Bevice Name WFI Smart dimmer Cancel Sa 1
Once device has been renamed, ① Tap Save ② then tap Cancel .
Done
Then tap Done .

Adding Additional Devices	
Home 🗸 🕛 🔁	
💭 Heavy Rain	
21 °C Excellent Excellent Outdoor Temperature Outdoor Temperature Outdoor PAC 3 Outdoor Air Quality	
All Devices Living room	
WiFi Dimmer switch	
NOTE: Constant power to the	
dimmer(s) is required at all times.	
Home Smart Me	
To add additional deivces tap the plus (+) sign in the upper corner. Repeat steps 2, 3, 4, 5 and 6.	

FEATURES







set the brightness level. from Bright(100)% to Dark(0%)