



## WP4 TOUCH PANEL (RGBW)



Manual

[www.illuminfx.com](http://www.illuminfx.com)

## Technical Specs

### WP4RGBW Touch Panel

---


Input Voltage:	5Vdc, 0.5A~1A (with a power adapter)
Output Signal:	RF 2.4GHz, DMX512
Control Mode:	RGBW, 4 Zones Control
Working Temp.:	-30°C~55°C
Package Size:	L132×W192×H50(mm)
Weight(N.W.):	230g
Weight(G.W.):	370g

### WP4 Constant Voltage Receiver (receiver is sold separately)


---

Input Voltage:	5~24Vdc
Current Load:	5A × 4CH Max. 20A
Output Power:	Max. 100W/240W/480W(5V/12V/24V)
Wireless Signal:	RF 2.4GHz
Working Temp.:	-30°C~55°C
Package Size:	L178×W48×H33(mm)
Weight(G.W.):	150g

## Product Size:


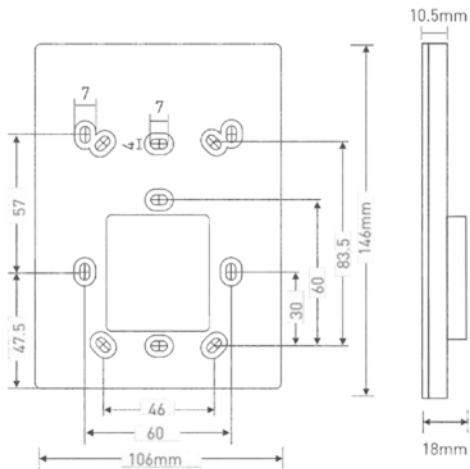


WP4 Touch Panel

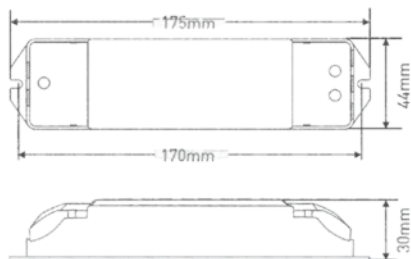


WP4-CV Receiver


## Terminals

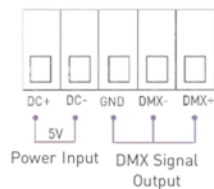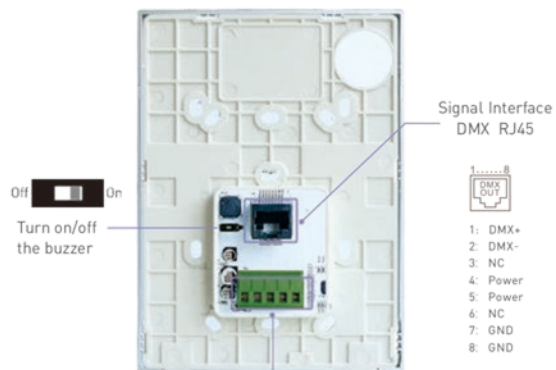


## Installation Instruction:

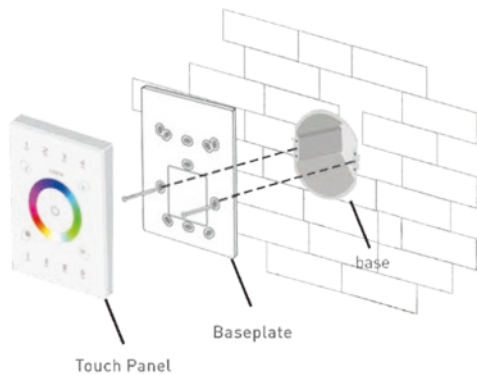


3. screw the baseplate and the back box in the wall firmly.

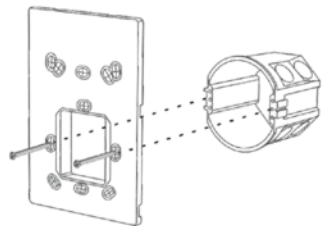


4. Connect in a right way and put the power adapter into the back box.

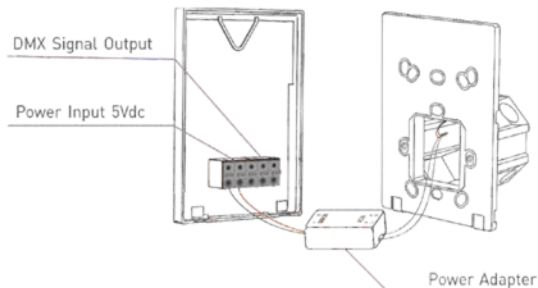

1. Install the back box into the wall. Typical boxes as below:


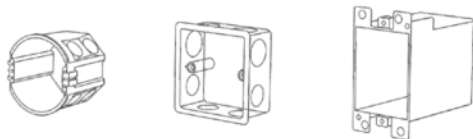


2. Use a straight screwdriver to pry the position shown:

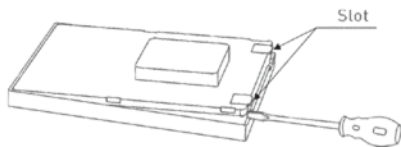

## Key Functions


- 5 Embed the upper touch panel into the baseplate and then tap the bottom to press into the slots.

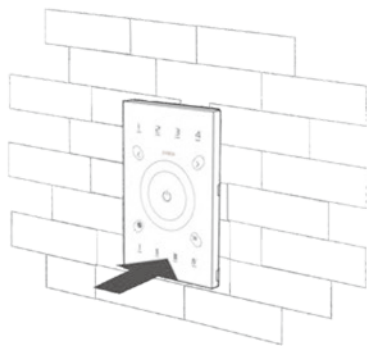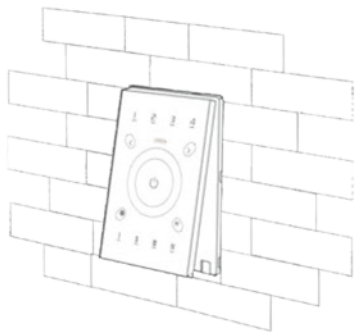

### The Changing Mode (Press to Select):

1. Static Red
2. Static Green
3. Static Blue
4. Static Yellow
5. Static Purple
6. Static Cyan
7. Static White
8. RGB Jumping
9. 7 Colors Jumping
10. RGB Smooth
11. 7 Colors Smooth
12. Static Black

## Wireless System Wiring

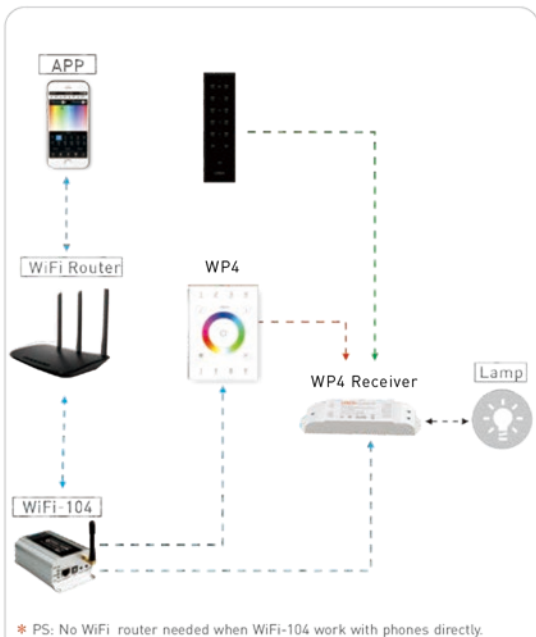

### Match Code Sequence


1. WiFi-104 & WP4
2. WP4 & WP4 Receiver

## Match / Clear Code

### Match Code:



With

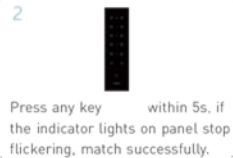

With WiFi-104



With Panel B



### Clear Code:



Press I IV keys simultaneously on UX8 for more than 6s, if all the indicator lights flicker 3 times, deactivate the matching successfully.