


How to program ON at Sunset, and OFF at a specific time

1

The Home screen of the ECO Plugs app will show the connected Gemini plugs listed in an arc around the "ECO" circle in the upper left portion of the screen. Note that the name of the plug closest to the lower left is in yellow, while the other plug's name is white. The yellow text tells you that it is the "active" plug in position to access the functions in the lower right portion of the screen.

To activate one of the "white" labeled devices, simply move them to the lower left corner of the circle with your finger.



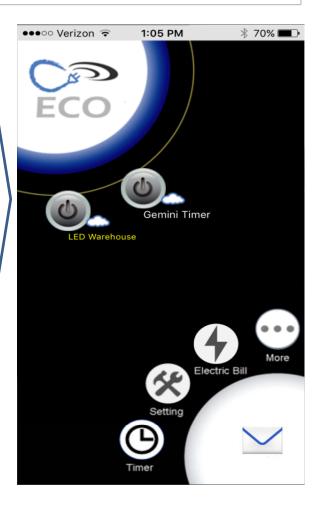

Note that now "Gemini Timer" is now in yellow, and "LED Warhehouse" has been moved off the screen. To begin programming, touch the "Timer" circle to bring up the timer setting screen




3

Once at the Timer screen, you will see a list of the existing program settings for this timer. In this example, there are no existing timer settings, so the screen is black.

Touch the + icon to add a program.



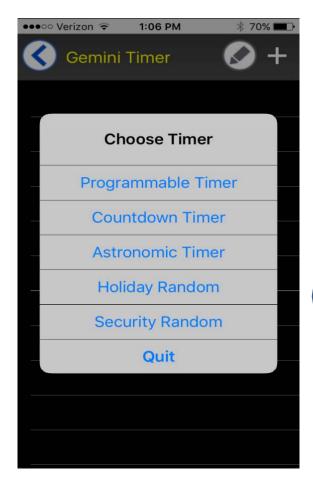

Next, touch "Astronomic Timer" to enter the astronomic timer program window.



5

Touch the circle next to "Sunset" under the ON function.

Touch to select the circle next to "Sunrise" for the OFF function.

Touch the Check mark in the upper right corner of the screen to save this program.

The Gemini Timer will now turn ON at Sunset, and turn OFF at Sunrise.





Next, touch the + icon again to enter the timer program screen.



7

Choose "Programmable Timer" to open the window which lets you choose specific ON/OFF times.



●●●○○ Verizon 🕏

1:07 PM

∦ 70% \blacksquare •



Gemini Timer



OFF ON 9 59 AM 10 59 AM 10 11 00 PM 00 PM 11 01 12 01 12 1

SUN MON TUE WED THU FRI SAT

Pick an ON time which will fall later than sunset each night, for example, 10:00pm. (The Astronomic prgram already has the Gemini Timer turning ON at Sunset, so this action will be ignored, because the timer is

already ON.)


Choose the OFF time you wish the timer to turn OFF. In this case we are illustrating 11:00pm. The timer will turn OFF at 11:00pm.

Touch the Checkmark to save the program.





You will now see two programs in the Timer screen: (1) the astronomic timer turning the Gemini Plug ON at Sunset, and the Programmable timer turning the Gemini Plug OFF at 11:00pm

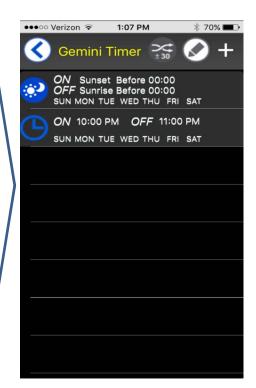



1:08 PM



∦ 70% **■**



OFF ON

Gemini Timer

3 44 59 45 AM 4 8 00 AM PM 5 46 9 PM 01 47

SUN MON TUE WED THU FRI SAT

10

If you want to turn thr timer ON in the morning before sunrise, simply repeat Steps 8 and 9, but make the ON time the time you wish to have the timer turn ON, and the OFF time set for AFTER Sunrise.

The astronomic program will turn the timer OFF at Sunrise.



