Triac/0-10V/1-10V/Potentiometer/10V PWM 5 in 1 Dimmable led driver KVG-DWJ 200W



Features

- ·Output constant voltage
- ·UL, cUL listed, Type HL rated. FCC
- ·Universal AC input: 110-277VAC
- .Power Factor: up to 0.98
- ·High efficiency : up to 88%
- ·Load: 10-100%
- $\cdot \mbox{Protection:short circuit/over loading/ Over temperature}$
- $\cdot \text{PWM}$ output, does not change the color index
- $\cdot \mbox{Full}$ protection metal case, for dry, damp, wet location
- ·Flicker-free
- ·Dimming function:
- Phase dimming: work with forward phase /leading edge ,MLV and Reverse phase /trailing edge ,ELV,TRIAC dimmers
- 0-10V dimming: 0-10V/1-10V/Potentiometer/10V PWM 4 in 1
- · Dimming range: 0-100%

 $\cdot \textsc{Suitable}$ for LED lighting and moving sign applications


| Model | | KVG-12200-DWJ | KVG-24200-DWJ |
|--------------|---------------------------------|--|-------------------------|
| Certificates | | UL, cUL listed, Type HL rated, FCC | |
| Output | DC Voltage | 12V | 24V |
| | Rated Current | 16.67A | 8.33A |
| | Rated Power | 200W | 200W |
| | Voltage Tolerance | ±0.5V | |
| | Voltage Regulation | ±0.5% | |
| | Load Regulation | ±2% | ±1% |
| Input | Voltage Range | 110-277VAC | |
| | Frequency Range | 47-63Hz | |
| | Power Factor (Typ.) @ full load | 0.98@120VAC 0.97@277VAC | 0.98@120VAC 0.95@277VAC |
| | THD (Typ.) @ full load | <20% | |
| | Efficiency (Typ.) @ full load | 83% @120Vac 87%@277Vac | 86% @120Vac 88%@277Vac |
| | AC Current (Max.) | 2.3A@100Vac | |
| | Inrush Current (Typ.) | 15A, 50%, 1.4ms @120Vac 30A, 50%, 1.4m,s @277Vac | |
| | Leakage current | <0.50mA | |
| Protection | Short Circuit | shut down o/p voltage, re-power on to recover after fault condition is removed | |
| | Over Loading | ≤120% constant current limiting, auto-recovery | |
| | Over temperature | $100^{\circ}C \pm 10^{\circ}C$ shut down o/p voltage, automatically recover after cooling. | |
| Environment | Working TEMP. | -40 \sim +60 $^{\circ}$ C (see below derating curve) | |
| | Working Humidity | 20~90%RH, non-condensing | |
| | Storage TEMP. Humidity | -40∼+80℃,10~95%RH | |
| | TEMP .coefficient | ±0.03%/°C(0~50°C) | |
| | Vibration | 10~500Hz, 5G 10min./1 cycle,period for 60min. each along X,Y,Z axes | |
| Safety& EMC | Safety standards | UL8750+UL1310 | |
| | Withstand voltage | I/P-O/P:1.88KVAC | |
| | Isolation resistance | I/P-O/P:100MΩ/500VDC/25°C/70%RH | |
| | EMC EMISSION | FCC Part 15 B | |
| others | Net. Weight | 1.8Kg | |
| | Size | 260*105*45mm (L*W*H) | |

Triac/0-10V/1-10V/Potentiometer/10V PWM 5 in 1 Dimmable led driver

KVG-DWJ 200W


| | packing | 10PCS/CTN |
|-------|---|-----------|
| | I. All parameters if NOT specially mentioned are measured at 120VAC input , rated load and 25 $^\circ\!{ m C}$ of ambient | |
| Notes | es temperature. | |
| | 2. To extend the driver's using life ,please reduce the loading at lower input voltage. | |

Derating Curve

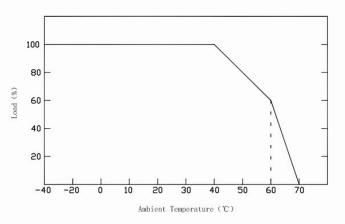

*To extend their life, please refer to the Derating Curve and derate according to the temperature.

Mechanical Specification

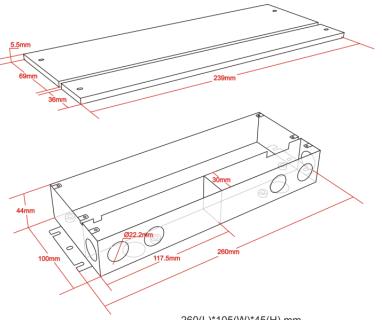

Unite: mm Tolerance: 0.5-2mm

260(L)*105(W)*45(H) mm

※ Input wire Black and White to be connected to AC L and N ,Green wire go ground,

*Output wire Red to LED Positive side (+), Black to LED Negative side (-).

*Dimming cable DIM (+) Purple to 0/1-10V dimmer signal(+), DIM (-) Grey to 0/1-10V dimmer signal (-)

*Please make sure your connect these correctly otherwise your product will not function correctly and could be damaged. %Note: Any other requests we can customized.

KVG-DWJ 200W


Connecting Diagram

%Using TRIAC/Phase cut dimming


1. The Pulse-Width Modulation (PWM) of output voltage can be adjusted through input terminal of the AC phase line(L) by connection a phase /Triac dimmer of lighting system.


2.Work with forward phase /leading edge ,MLV and reverse phase /trailing edge ,ELV,TRIAC dimmers.

3.Please try to use dimmers with power at least 1.5 times as the output power of the driver.

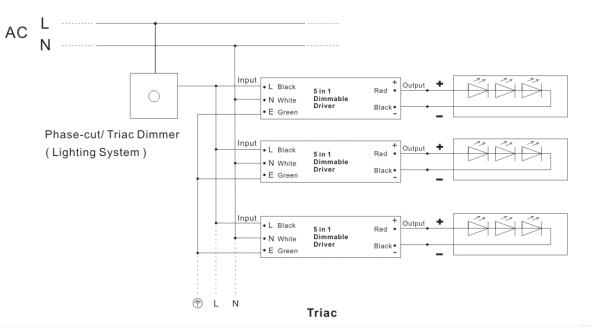

***Using 0-10/1-10V dimming**

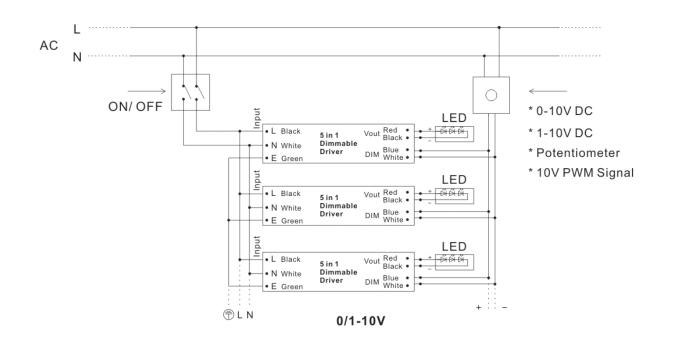

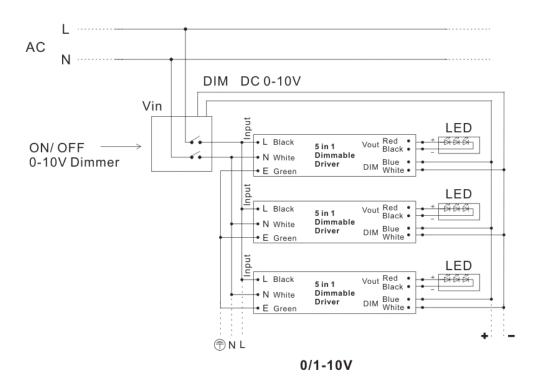

Instruction:

1)This driver should be installed by qualified and professional person;

2)Please make sure the driver is installed with adequate ventilation around it to allow for heat dissipation.

3)Ensure that wiring is correct before test in order to avoid light and power supply damage;

4) If driver Cannot work normally, don't maintain privately; Have any question, please contact us.